



356487 / Manual / Jessie Milner / 2 Aug 2019

Pre-use Hoist Inspection Checklist

Complete

Inspection score	Failed items	Created actions
75.00%	2	0
Hoist# 356487		
Hoist Type Manual		
Building# A2		
Custodian Jessie Milner		
Location 94 S Piedmont Ave, Port Orange, FL, 32129		
Conducted on 📅 2nd Aug, 2019 ⌚ 11:40 AM +08		

Inspection

Hoist rope or load chain: lower hook to above floor level, check visually for any broken wires, kinking, crushing, birdcaging, corrosion. Check load chain for bent, or stretched, cracked, scored, or heat damaged links.

Unsatisfactory

– Notes

Broken wires on hoist lines found. Will have it replaced by maintenance crew asap.

– Photos



Photo 2

Hook / hook block and supporting hook (if equipped): check for excessive throat opening, bent/twisted elements, hook swivels freely, safety latch operational, and rope sheaves or chain sprockets for signs of wear or malfunction.

Unsatisfactory

– Notes

Hook is damaged. Will report to maintenance for replacement. Tagged Hoist as NOT SAFE FOR USE.

– Photos



Photo 3

Inspection

2 Failed 75.00%

1. Operators must perform this inspection (from floor level only) before each shift, and submit the form to the equipment custodian.

2. Equipment found unsafe must be removed from service. Report any deficiencies immediately to the custodian.

Inspection sticker: check for current annual sticker and all other required safety markings.

Satisfactory

– Photos



Photo 1

Upper limit switch (if equipped): lower hook slightly, then raise hook slowly into switch, to check operation.

Satisfactory

All operating mechanisms: check for proper operation of all functions, hoist brake, bridge, trolley, pendant station (if equipped), hoist control chain or lever.

Satisfactory

Hoist rope or load chain: lower hook to above floor level, check visually for any broken wires, kinking, crushing, birdcaging, corrosion. Check load chain for bent, or stretched, cracked, scored, or heat damaged links.

Unsatisfactory

– Notes

Broken wires on hoist lines found. Will have it replaced by maintenance crew asap.

– Photos



Photo 2

Hook / hook block and supporting hook (if equipped): check for excessive throat opening, bent/twisted elements, hook swivels freely, safety latch operational, and rope sheaves or chain sprockets for signs of wear or malfunction.

Unsatisfactory

– Notes

Hook is damaged. Will report to maintenance for replacement. Tagged Hoist as NOT SAFE FOR USE.

– Photos



Photo 3

Spooling: check spooling of wire rope onto all sheaves and drums. Check load chain spooling onto sprockets and into chain bucket (if equipped).

Satisfactory

Electric, air, or hydraulic: check festoons, collectors, pendant controls, lights, strain relief, wiring for exposed conductors, and for any leaky hoses, tanks, or valves.

Satisfactory

Hoist support: fasteners, beams, trolley, gantry structure/wheels, and jib structure, engine hoist components.

Hoists must be supported by an approved and engineered anchorage (portable hoists) or beam/gantry equal to or more than hoist capacity.

Satisfactory

Sign Off

Inspector's name and signature



Jessie Milner

2nd Aug, 2019 12:16 PM +08

Photos

3 Photos



Photo 1

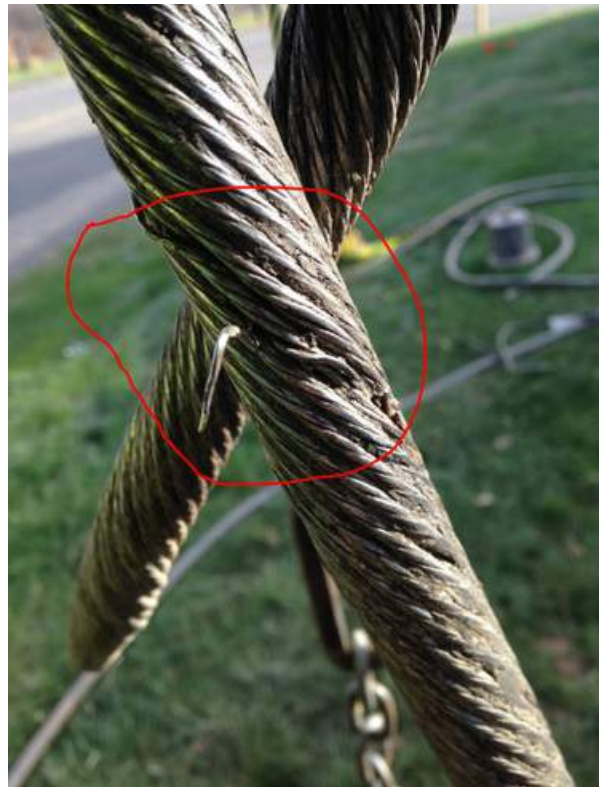


Photo 2



Photo 3